

A large range of cams are available. Cams can be straight, 45° cranked or 90° cranked. Cams can also be notched on either edge as required.

Cams can be fitted at 3, 6, 9 or 12 o'clock as shown. Please specify following details when ordering

1. For all cams:

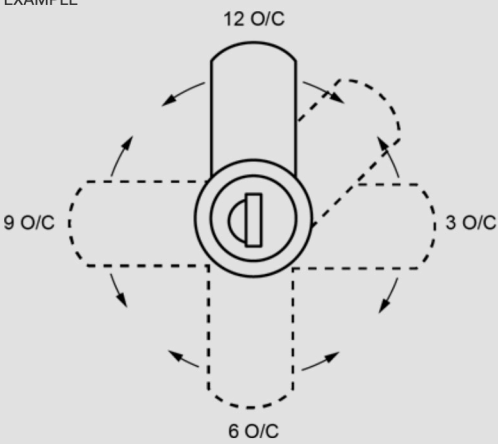
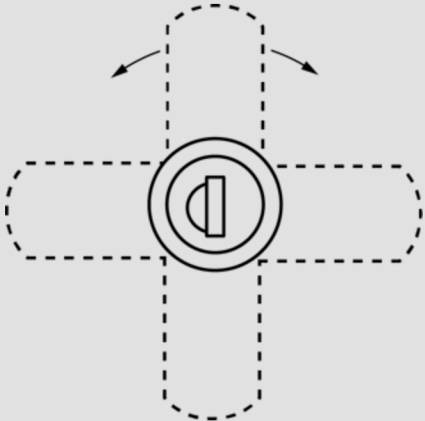
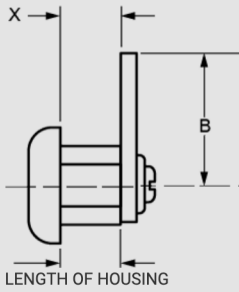
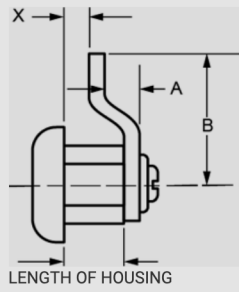
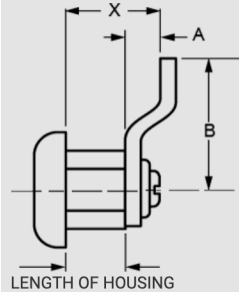
 
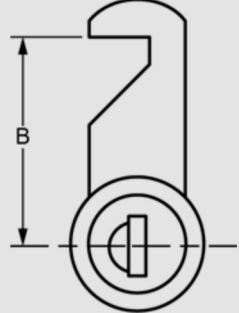
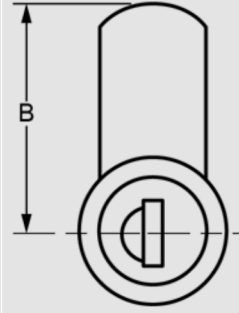
- Cam reference, if known.
- Cam position, when locked.
- Dimension B.

2. For cranked cams:

- Whether cranked towards head or away from head.
- Dimension A (alternatively please quote dimension X).

3. For notched cams when viewed from front of lock:

- If fitted at 6 or 12 o'clock specify whether notch is on Left or Right hand side.
- If fitted at 3 or 9 o'clock specify whether notch faces upwards or downward.

CAM POSITION			CAM MOVEMENTS
<p>EXAMPLE</p>  <p>CHOOSE CAM POSITION WHEN LOCKED (VIEW FROM FRONT)</p>			 <p>MOVEMENTS CAM MOVEMENTS TO LOCK/UNLOCK CORRESPOND TO THE KEY MOVEMENTS. PLEASE SEE STANDARD MOVEMENTS PAGE.</p>
DIMENSION 'X'			
 <p>LENGTH OF HOUSING</p>	 <p>LENGTH OF HOUSING</p>	 <p>LENGTH OF HOUSING</p>	<p>"X" DIMENSION IS THE DISTANCE BETWEEN THE UNDERSIDE OF LOCK HEAD AND INSIDE FACE OF THE CAM "A" IS DIMENSION TO BE SPECIFIED ON CAM NUMBER SEE STANDARD CAMS & MINI CAMS</p>
DIMENSION 'B'			
 <p>B</p>	 <p>B</p>	 <p>B</p>	<p>"B" DIMENSION - IS THE WORKING LENGTH OF CAM MEASURED FROM CENTRE OF LOCK. N.B. WITH A NOTCHED CAM STATE "NOTCHED - LEFT" (SHOWN) OR "NOTCHED - RIGHT".</p>