

Zenith Digital Combination Lock Range

[Play Instructional Video](#)

FUNCTION	MODE		KEY SEQUENCE	NOTES		
	PUBLIC	PRIVATE				
MASTER CODE FUNCTIONS - FOR STEPS 1-3 PLEASE ENTER THE RELEVANT NUMBERS IN THE SEQUENCE SHOWN BELOW (EG. STEP1STEP2STEP3)						
			STEP 1	STEP 2	STEP 3	
CHANGE MASTER CODE	✓	✓	[logo] [Old Master Code]	01	[New Master Code] [New Master Code]	MASTER CODE IS EIGHT DIGITS
CHANGE USER CODE		✓	[logo] [Master Code]	02	[New User Code]	USER CODE IS FOUR DIGITS
DELETE USER CODE	✓		[Master Code]			OPENS LOCK AND DELETES USER CODE
SET / CHANGE SUB-MASTER CODE	✓	✓	[logo] [Master Code]	03	[New Sub-Master Code]	SUB-MASTER CODE IS SIX DIGITS
DELETE SUB-MASTER CODE	✓	✓	[logo] [Master Code]	07		DELETES SUB-MASTER CODE
OPEN LOCK	✓	✓	[Master Code]			DELETES USER CODE IN PUBLIC MODE
CLOSE LOCK		AUTO				RE-LOCKS AUTOMATICALLY AFTER 4 SECONDS
SET PUBLIC MODE		✓	[logo] [Master Code]	08		DELETES ALL EXISTING USER CODES
SET PRIVATE MODE	✓		[logo] [Master Code]	09	[New User Code]	DELETES ALL EXISTING USER CODES
SET TECHNICIAN MODE	✓		[logo] [Master Code]	10	[New Technician Code]	TECHNICIAN CODE IS SIX DIGITS
REMOVE TECHNICIAN MODE	✓		[logo] [Master Code]	11		DELETES TECHNICIAN CODE
SET AUDIBLE BUTTONS ON	✓	✓	[logo] [Master Code]	12		UNIT WILL BEEP ON EACH BUTTON PRESS
SET AUDIBLE BUTTONS OFF	✓	✓	[logo] [Master Code]	13		UNIT WILL OPERATE SILENTLY
SET ALARM MODE ON & SET TIME		✓	[logo] [Master Code]	14	[Time Code]	SWITCHED VERSION ONLY. SEE NOTES ON TIMERS BELOW
SET ALARM MODE OFF		✓	[logo] [Master Code]	15		SWITCHED VERSION ONLY
SET AUTO-TIMED UNLOCK ON & SET TIME	✓		[logo] [Master Code]	16	[Time Code]	SEE NOTES ON TIMERS BELOW
SET AUTO-TIMED UNLOCK OFF	✓		[logo] [Master Code]	17		UNIT WILL NO LONGER OPEN AUTOMATICALLY
SET COIN LOCK MODE ON	✓		[logo] [Master Code]	18		SWITCHED VERSION ONLY
SET COIN LOCK MODE OFF	✓		[logo] [Master Code]	19		SWITCHED VERSION ONLY
RE-LOCK TIME		✓	[logo] [Master Code]	23	[Enter chosen time length]	1 = 8 SECONDS, 2 = 16 SECONDS, 3 = 32 SECONDS 4 = 40 SECONDS, 5 = 50 SECONDS, 6 = 60 SECONDS
LOCK OUT MODE	✓	✓	[logo] [Master Code]	24		IF USER GETS CODE WRONG 5 TIMES - 8 SECOND TIME OUT
REMOVE LOCK OUT MODE	✓	✓	[logo] [Master Code]	25		
SET AUTO-TIMED CODE CANCEL ON & SET TIME	✓		[logo] [Master Code]	26	[Time Code]	DISABLES USER CODE AFTER SET TIME - SEE NOTES ON TIMERS
SET AUTO-TIMED CODE CANCEL OFF	✓		[logo] [Master Code]	27		UNIT WILL NO LONGER CANCEL USER CODE
SUB-MASTER CODE FUNCTIONS - PLEASE ENTER THE RELEVANT NUMBERS IN THE SEQUENCE SHOWN BELOW (EG. STEP1STEP2STEP3)						
CHANGE USER CODE		✓	[logo] [Sub-Master Code]	02	[New User Code]	USER CODE IS FOUR DIGITS
CHANGE SUB MASTER CODE	✓	✓	[logo] [Sub-Master Code]	03	[New Sub-Master Code]	SUB-MASTER CODE IS SIX DIGITS
DELETE USER CODE	✓		[Sub-Master Code]			OPENS LOCK AND DELETES USER CODE
OPEN LOCK	✓	✓	[Sub-Master Code]			DELETES USER CODE IN PUBLIC MODE
CLOSE LOCK		AUTO				RE-LOCKS AUTOMATICALLY AFTER 4 SECONDS
USER CODE FUNCTIONS - PLEASE ENTER THE RELEVANT NUMBERS IN THE SEQUENCE SHOWN BELOW (EG. STEP1STEP2STEP3)						
CHANGE USER CODE		✓	[logo] [Old User Code]	02	[New User Code] [New User Code]	USER CODE IS FOUR DIGITS
OPEN LOCK	✓	✓	[User Code]			
CLOSE LOCK	✓		[User Code]			WHEN SINGLE USER CODE ENTRY MODE IS SET
CLOSE LOCK	✓		[User Code] [User Code]			WHEN DOUBLE USER CODE ENTRY MODE IS SET
CLOSE LOCK		AUTO				RE-LOCKS AUTOMATICALLY AFTER 4 SECONDS



Zenith Digital Combination Lock Range

Play Instructional Video 

FUNCTION	MODE		KEY SEQUENCE	NOTES
	PUBLIC	PRIVATE		
TECHNICIAN CODE FUNCTIONS				
OPEN LOCK	✓		[Technician Code]	DOES NOT DELETE USER CODE
CLOSE LOCK	AUTO			RE-LOCKS AUTOMATICALLY AFTER 4 SECONDS
FUNCTIONS AVAILABLE TO ALL CODES				
BATTERY CHECK	✓	✓	[logo] [logo]	REPLACE BATTERIES IF RED LIGHT SHOWS
NOTES	TIMER FUNCTIONS		TIME CODE EXAMPLES	BATTERY CONDITION INDICATOR
ALL ACCEPTABLE BUTTON PRESSES ARE SIGNIFIED BY A GREEN LIGHT	TIME CODE		001 1 MIN	FOUR GREEN LIGHTS - EXCELLENT
	TIME CODE		010 10 MINS	THREE GREEN LIGHTS - VERY GOOD
INCOMPLETE FUNCTIONS "TIME-OUT" AFTER 4 SECONDS	TIME CODE		030 1/2 HR	TWO GREEN LIGHTS - GOOD
	TIME CODE		060 1 HR	ONE GREEN LIGHT - LOW
ERRORS AND "TIME-OUTS" ARE SIGNIFIED BY FLASHING RED LIGHT	TIME CODE		480 8 HRS	RED LIGHT - CHANGE BATTERIES AS SOON AS POSSIBLE
	TIME CODE		720 12 HRS	
FOLLOWING AN ERROR OR "TIME-OUT", UNIT REVERTS TO PREVIOUS SETTINGS	TIME CODE		999 16 HRS 39 MINS (MAXIMUM)	FLASHING RED LIGHT PRIOR TO LOCK OR UNLOCK INDICATES LOW BATTERY VOLTAGE. CHANGE BATTERIES AS SOON AS POSSIBLE.
TIME CODES ARE 3-DIGIT CODES CORRESPONDING TO THE NUMBER OF MINUTES	ALL TIMES ARE APPROXIMATE +/- 10%			
MASTER CODE (8 digits)			SUB MASTER CODE (6 digits) (No Default)	
SUB MASTER CODE (6 digits) (No Default)			USER CODE (4 DIGITS)	
<div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div></div>			<div><div></div><div></div><div></div><div></div><div></div><div></div></div>	
ENSURE THAT YOU CHANGE THE DEFAULT MASTER CODE TO YOUR OWN MASTER CODE AND KEEP A SAFE RECORD - IT IS NOT POSSIBLE TO PROGRAM THE LOCK WITHOUT IT				

LOWE & FLETCHER LTD

Moorcroft Drive, Wednesbury, West Midlands, WS10 7DE, UK
 Tel: +44 (0) 121 505 0400
 Email: sales@lowe-and-fletcher.co.uk
 www.lowe-and-fletcher.co.uk

LOWE & FLETCHER, INC.

650 Airport Place, Norton Shores, MI-49441, Michigan, USA
 Tel: +1 (616) 994 0490
 Email: sales@loweandfletcherinc.com
 www.loweandfletcherinc.com

EURO-LOCKS SA NV

Rue de la Fontaine 8, 6600 Bastogne, Belgium
 Tel: +32 61 212 261
 Email: sales@euro-locks.be
 www.euro-locks.be

EURO-LOCKS SA

1 Rue du Stade, 57730 Folschviller, France
 Tel: +33 (0) 3 87 92 61 11
 Email: euro-locks@euro-locks.fr
 www.euro-locks.fr

EURO-LOCKS GMBH

Am Bruchwald 22, 66280 Sulzbach/Neuweiler, Germany
 Tel: +49 (0) 6897 9072 0
 Email: vertrieb@euro-locks.de
 www.euro-locks.de

EURO-LOCKS SP. Z O.O.

ul. Pawła 29, 41-708 Ruda Śląska, Poland
 Tel: +48 (32) 344-78-70, -82, -84
 Email: sekretariat@euro-locks.pl
 www.euro-locks.pl